

STANDARD FULL SCREENS (½ screen are now optional)

Available on orders starting after May 15th 2021



FLEXSCREEN

THE WORLD'S FIRST AND ONLY FLEXIBLE WINDOW SCREEN

INNOVATIVE, DURABLE,
EFFORTLESS, AND BEAUTIFUL

FlexScreen is everything
you want a screen to be



Shark Tank TM name and logo used with permission.
©2020 Sony Pictures Television Inc.

OUR PATENTED, SIMPLE, PROBLEM-SOLVING DESIGN IS TURNING HEADS IN THE INDUSTRY, EARNING MULTIPLE AWARDS, AND SELLING MILLIONS. WELCOME TO THE FUTURE OF WINDOW SCREENS!

TRADITIONAL WINDOW SCREEN
technology is over 100 years old and loaded with problems.
We have all dealt with one or more of these issues:

- Bulky and flimsy aluminum frames that bend and damage easily, require color matching, and impede your view to the outside.
- Complicated hardware that breaks with normal use and makes installation and removal difficult and frustrating.
- Traditional window screen failure rate is approximately 1 per 30 units, driving up the overall cost of ownership and creating a great deal of inconvenience for the homeowner.

FLEXSCREEN
solves every one of these problems with our innovative,
award-winning design:

- Our sleek, flexible spring-steel frame, coated in exterior-grade PVC, is practically indestructible, scratch-resistant, and impervious to weather extremes. It hides in the screen pocket, eliminating the need for color matching, and dramatically improving sightlines. With FlexScreen you'll enjoy the entire view!
- ZERO hardware = effortless installation and removal in seconds - from outside OR inside your home!
- Our replacement rate is approximately 1 per 3,600 units - making FlexScreen essentially the last screen you will ever need to buy. In other words, FlexScreen owners never have to think about their window screens again!



THE ENERGY KING

Windows & Doors

815 Smith Street | Buffalo, NY 14206
www.energykingwindows.com
(716) 854-1600 | Fax: (716) 856-4509

FULL SCREEN INSTALLATION & REMOVAL GUIDE

INSTALLATION

STEP 1

While keeping the sides compressed, place one top corner of the screen into the screen track.



STEP 2

Keeping both sides compressed, place the opposite top corner into the screen track.



STEP 3

Continue to keep sides compressed, and insert screen into a bottom corner. [Lift slightly if your window has a lip on the sill.] Release this side of the screen.



STEP 4

Place the last corner into the screen track and release completely once all corners are in place.



REMOVAL

STEP 1

Gently press on the center of the screen until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".



STEP 2

While keeping the sides compressed, lift the screen up and remove one of the bottom corners from the screen track.



STEP 3

Remove the opposite bottom corner from the screen track.



STEP 4

With both corners out of the screen track, pull FlexScreen down from the top and remove the screen.



WATCH THE VIDEO

